

USB SealO User's Guide

Introduction

This document is intended as a precise guide to demonstrate the installation of SealO modules in Linux Operating Systems. This guide consists of USB device initialization instructions. There are often subtle differences in Linux distributions. Any distribution specific conflicts should be resolved by consulting the distribution's documentation.

SealO USB Installation Instructions

1.) Plug in device(s).

2.) Open a terminal window and attain root privileges. This varies by distribution, but the most common method is to use the **su** command as demonstrated below.

```
[test@sealevel ~]$ su -  
Password:  
[root@sealevel ~]#
```

3.) Ensure that the device has been detected by the USB subsystem. This can be accomplished by using the **lsusb** command as demonstrated below. This command returns information about all devices attached to the system's USB subsystem. Verify that the SealO module is contained in the device list.

```
[root@sealevel ~]# lsusb  
Bus 002 Device 011: ID 0c52:e402 Sealevel Systems, Inc.  
Bus 002 Device 010: ID 0c52:2101 Sealevel Systems, Inc.  
Bus 002 Device 003: ID 0451:2077 Texas Instruments, Inc. TUSB2077 Hub  
Bus 002 Device 001: ID 0000:0000  
Bus 004 Device 001: ID 0000:0000  
Bus 003 Device 001: ID 0000:0000  
Bus 001 Device 007: ID 413c:3200 Dell Computer Corp.  
Bus 001 Device 005: ID 413c:2003 Dell Computer Corp.  
Bus 001 Device 004: ID 0557:7000 ATEN International Co., Ltd  
Bus 001 Device 001: ID 0000:0000
```

4.) The kernel driver module for all FTDI based USB serial devices is sometimes configured for automatic load at boot time. Depending on distribution, it may be necessary to unload the driver if it is already loaded. This can be achieved by issuing the following command. This command can be issued without detriment when the driver is not loaded.

```
[root@sealevel ~]# modprobe -r ftdi_sio
```

5.) The FTDI serial USB driver contains some ID's for Sealevel products. However, SealO modules are currently not included in the driver. The driver allows a single vendor and product pair to be passed at module load time. Using these parameters, it is unnecessary to recompile the driver. To inform the FTDI driver of the SealO module's identification information, issue the following command.

```
[root@sealevel~]# modprobe ftdi_sio vendor=0x0C52 product=0xE402
```

6.) The driver should now have identified the SealO module and is ready for communications. It may now be necessary to create the character special file used to interface with the device. Most modern distributions include a method of automatically creating these files in the /dev file system when they are identified by a device driver. The character special files typically use the ttyUSB# nomenclature. Verify their creation by issuing the following command.

```
[root@sealevel~]# ls -al /dev/ttyUSB*  
crw-rw---- 1 root uucp 188, 0 2008-05-08 10:59 /dev/ttyUSB0  
crw-rw---- 1 root uucp 188, 1 2008-05-08 10:59 /dev/ttyUSB1
```

7.) If the character special files have not been created automatically, or more than one appears, it is necessary to identify the driver *major* and device *minor* numbers. The driver *major* can be determined by searching the devices file in the /proc file system as demonstrated in the following command. The *major* number is highlighted in yellow below.

```
[root@sealevel~]# cat /proc/devices | grep -i "ttyUSB"  
188 ttyUSB
```

The device *minor* number can also be determined by searching a file located in the /proc file system. The tty directory contains information about all of the currently loaded tty drivers. Executing the next command will display a list of all USB serial ports detected by any USB serial drivers currently loaded. If multiple USB serial ports are detected by the system, identify which corresponds to the SealO module by checking the vendor and product IDs.

```
[root@sealevel~]# cat /proc/tty/driver/usbserial  
usbserinfo:1.0 driver:2.0  
0: module:ftdi_sio name:"FTDI USB Serial Device" vendor:0c52 product:2101 num_ports:1  
port:1 path:usb-0000:00:1d.1-1.2  
1: module:ftdi_sio name:"FTDI USB Serial Device" vendor:0c52 product:e402 num_ports:1  
port:1 path:usb-0000:00:1d.1-1.4
```

8.) If the character special file for the SealO module was not present in step 6, it may be created by executing the following command. It may also be beneficial to you to create any extra special files corresponding to other USB serial devices that are not currently present. Be sure to replace the major and minor numbers listed below with those listed by the commands demonstrated in step 7 as they may vary from system to system.

```
[root@sealevel~]# mknod /dev/ttyUSB0 c 188 0  
[root@sealevel~]# mknod /dev/ttyUSB1 c 188 1
```

9.) User applications may now interact with SealO modules through the character special file with *major* and *minor* numbers corresponding to those determined in step 7. To check the *major* and *minor* numbers that are associated with the character special files in /dev file system, use the **ls** command as demonstrated. The *major/minor* pair is highlighted in yellow for each file.

```
[root@sealevel~]# ls -al /dev/ttyUSB*  
crw-rw---- 1 root uucp 188, 0 2008-05-08 10:59 /dev/ttyUSB0
```

```
crw-rw---- 1 root uucp 188, 1 2008-05-08 10:59 /dev/ttyUSB1
```

10.) Ensure that all users account which must access the SealO modules may do so. There are many ways to configure the file permissions to accomplish this goal, depending on the system and requirements. Distribution documentation on the **chmod** and **chown** commands should be consulted. To simply allow full access to any USB serial device, use the following command.

```
[root@sealevel~]# chmod 777 /dev/ttyUSB*
```

The SealO module can now be accessed through the character special file corresponding to the *major/minor* pair of the SealO module. In the examples shown here, the file would be /dev/ttyUSB1.